

## ENABLING WI-FI ON YEALINK PHONES

Here's how to connect to your Wi-Fi network on your Yealink. These instructions apply to all Yealink wireless-capable phones:

1. Go to Menu > Basic > Wi-Fi
  - a. On Yealink T53, go to Menu > Settings > Basic Settings > Wi-Fi
2. Choose [x] Available Network[s], "x" being the number of available networks
3. Choose Enter
4. Choose the desired Wi-Fi network
5. Choose Connect
6. Enter the password
7. Choose Ok

Here's how to add a Wi-Fi network manually:

1. Go to Menu > Basic > Wi-Fi
2. Choose Known Network[s]
3. Choose Add
4. Choose the appropriate Security Mode
5. Enter the Wi-Fi network name, password and, other applicable information
6. Choose Save

## ENABLING WI-FI USING WF50 DONGLE

Many Yealink IP phones don't natively support Wi-Fi. But you can easily add Wi-Fi connectivity using the Yealink WF50 Wi-Fi USB Dongle. This plug-and-play accessory supports dual-band 802.11ac Wi-Fi. It has a high transmission rate to provide stable voice communications.

Here's how to set up Wi-Fi using the Yealink WF50 dongle.

1. Plug the WF50 dongle into the phone
2. Go to Menu > Basic > Wi-Fi
  - a. On Yealink T53, go to Menu > Settings > Basic Settings > Wi-Fi
3. Under Wi-Fi, choose On
4. Choose Save

Then follow the standard instructions as given above.